


Orbry TrayFast

Joist Hangers



Orbry Tray**Fast** is a new way to quickly and easily fix wet room shower trays by helping to create a solid floor level with the top of the joists. No longer will you have the fiddly and time consuming job of fixing supporting battens to the joists, simply fix Orbry Tray**Fast** joist hangers and lay 18mm ply inlay in half the time!

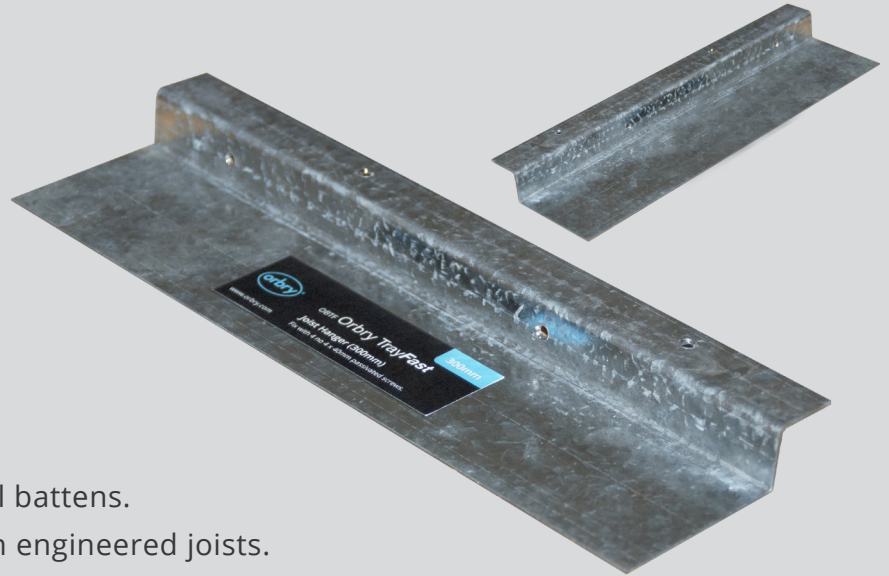

Features:

- ✓ Fix in half the time it takes to install battens.
- ✓ Unlike battens, Tray**Fast** works with engineered joists.
- ✓ Fully galvanized for wet areas.
- ✓ Will take very heavy loads.
- ✓ Low cost.

web: www.orbry.com tel: 0845 208 0221

Fixing Instructions



1. Mark the position of the shower tray by placing it on the floor and drawing around it. Locate the nearest joists outside the marked area. Usually these will be denoted by where the floor boards are screwed down. Mark the line of the joist and remove the screws as necessary. Using a circular saw, set to the depth of the floor boards cut along the marked lines. Remove any screws within the marked area and remove the floorboards. Position the shower tray to check the fit and remove.



2. Position the Orbry **TrayFast** joist hangers equidistant along the joists (gaps of up to 70mm between each **TrayFast** are acceptable) and fix each with (4x) 4 x 40mm passivated screws.



3. Cut 18mm exterior quality ply to fit between the joist hangers and loose lay on the hangers.



4. Mark the positions of any drains and position as per manufacturers' recommendations. Fix plywood in position with Gripfill adhesive and fix shower tray to manufacturers' recommendations.



Follow us on Twitter:
[@orbry](https://twitter.com/orbry)

web: www.orbry.com



Like us on Facebook:
facebook.com/OrbryWetRooms

tel: 0845 208 0221